

Saw Cutting Joints

Slag Cement in Concrete


No. 4

WHAT ARE SAW CUTS?

Saw-cut joints are an effective way to control cracking due to shrinkage.

Saw cuts are a means of creating joints in concrete. Joints are an effective way to control cracking due to shrinkage. Joints are installed at prescribed intervals to determine where cracks occur.

Joints need to be cut after the concrete has achieved enough strength to keep it from raveling, but before internal stresses in the concrete become great enough to initiate a crack. The earlier the concrete can be cut without raveling, the better the chances are that the concrete will not crack before saw cutting.

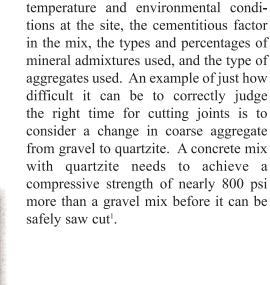

The difficulty in correctly determining

the earliest time for saw cutting is

that it changes according to the type of

admixtures in the concrete, the ambient



Joints need to be cut before internal stresses in the concrete become great enough to initiate a crack.

SAW CUTTING JOINTS

How does Slag Cement Affect Saw Cutting?

When placing concrete manufactured with slag cement, it is important to remember that set times may be increased and early strength development may take longer. The higher the percentage of slag cement used and the lower the ambient temperature, the more pronounced these effects will be. In the summer, when moderate to high temperatures are the norm, mixtures containing up to 50 percent slag cement have been used with success. In colder seasons, the percentage of slag cement may need to be decreased in order to achieve the early strengths necessary to provide an adequate window for saw cutting.



One method to eliminate the guesswork in the timing of cutting joints in any concrete is using an early entry saw. This method allows a much larger window for saw cutting concrete before the development of uncontrolled shrinkage cracks.

Whatever method is used, it is important for contractors to understand the materials they are using and how these materials will affect the correct time for saw cutting concrete joints. It is also important to understand how these mixes can be adjusted for different environmental conditions.

As a rough guideline, the time to saw cut is delayed approximately 30 minutes for every 10 percent of slag cement replacing portland cement. With colder mixture temperatures the delay may be longer. This delay can be adjusted through the use of accelerating admixtures, heated water or heated aggregates.

Reference

1. Guidelines for Timing Contraction Joint Sawing and Earliest Loading for Concrete Pavements, Volume I: Final Report; Federal Highway Administration, McLean, VA, 1994. Early entry saws allow a much larger window for saw cutting concrete before the development of uncontrolled shrinkage cracks.



Slag Cement Association 38800 Country Club Farmington Hills, MI 48331

> phone: 847.977.6920 e-mail: info@slagcement.org web: www.slagcement.org

As with all concrete mixtures, trial batches should be performed to verify concrete properties. Results may vary due to a variety of circumstances, including temperature and mixture components, among other things. You should consult your slag cement professional for assistance. Nothing contained herein shall be considered or construed as a warranty or guarantee, either expressed or implied, including any warranty of fitness for a particular purpose.

About the Slag Cement Association...

The Slag Cement Association is the leading source of knowledge on blast-furnace slag-based cementitious products. We promote the increased use and acceptance of these products by coordinating the resources of member companies. We educate customers, specifiers and other end-users on the varied attributes, benefits and uses of these products.

Printed on recycled paper.
© 2013 Slag Cement Association